



FITTING INSTRUCTIONS REGULATOR/RECTIFIER RR24

HPI – Kuilenstraat 97, 3960 Bree, Belgium
TEL: (0032) 089-46 74 39 | FAX: (0032) 089-47 33 28 | GSM: (0032) 0495-53 90 21
Email: hpi@hpi.be | Website: www.hpi.be

The RR24 is a combined regulator/rectifier. It replaces the regulator as well as the rectifier you currently have installed on your bike. Installation is very easy:

Connect the rectifier.

The RR24 has the same connector as your old rectifier. Simply unplug your old rectifier, and plug in the RR24.

ORIGINAL BIKE WIRE	RR29 WIRE	FUNCTION
3x Yellow	3x Yellow	3 phases from generator stator
Red	Red	Charging current to battery (+)
Green	Green	Charging current return from battery (-) / frame ground

Connect the regulator.

Unplug the three cables from your old regulator. Connect the white cable and the black cable to the white cable and the black cable coming from the RR24. The green cable is no longer needed, as it was used to ground your old regulator.

ORIGINAL BIKE WIRE	RR29 WIRE	FUNCTION
White	White	Excitation current to field coil
Black	Black	IGN switched battery (+) sense to regulator
Green	Green	Regulator ground (not needed with RR24)

