


HPI wants to apologize for a mistake in our production process.
In the most recent batch of 210 type stators, the blue and white wire are swapped.
However, you can easily fix this error by swapping the blue and white wire in the 3-pole connector.
Please check your stator connection before installing and using the ignition.


Check the stator:

- Turn the stator upside down.
- Check the position of the white and blue cable on the stator side.
- Check the position of the white and blue cable on the connector side.
- Compare with the drawing on next page.
- If necessary → Swap white and blue in the connector.

Stator picture:

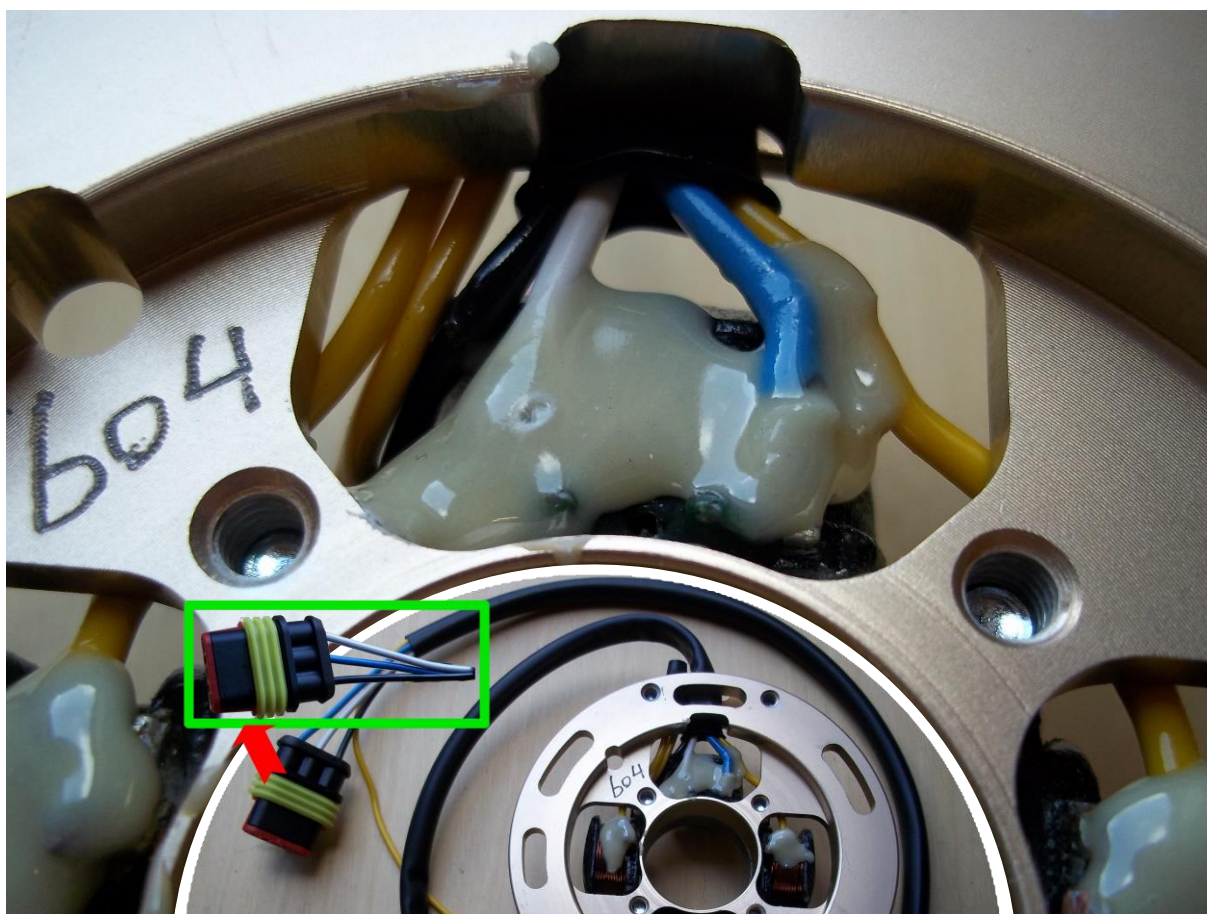

How to remove the connector:

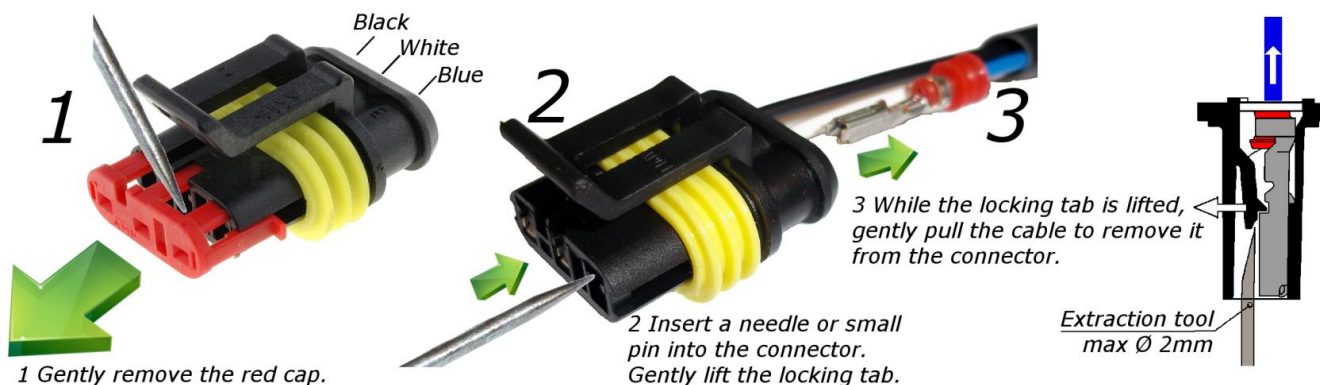

To reassemble the plug, insert the terminals back in place till the locking tab clicks in and put back the red cap.

Good conditions:

- The pictures below show the correct stator – connector combinations.
- Hold the stator upside down.
- Hold the locking lip of the connector on top.
- If your wiring differs from one of the situations below,
→ **swap the blue and white cable in the connector**

